

SMART WALL

INSTALLATION INFORMATION




HIRE & SALES
1300TEMPFENCE
1300tempfence.com.au
1300 836 733


INSTALLING SMART WALL

TOOLS REQUIRED

- 16mm deep socket for fence panel clamps
- Bung tool for filling & drainage bungs

INSTRUCTIONS

1. Ensure the ground is reasonably level to provide a suitable foundation for the base.
2. Place the base on the ground along the intended install alignment. Ensure the filling and drainage plugs are to the inside of the worksite to prevent tampering and facilitate easy filling.
3. Insert the fence panel into the receiving slot of the SmartWall base.
4. Secure the fence panel to the base by installing two M10 panel lock bolt sets with the 16mm socket, ensuring the nut is to the inside of the worksite to prevent tampering.
5. Place the next base approx. 70mm apart from the first, then repeat steps 3 & 4 to install the fence panel to the base.
6. Fix 2 x panel clamps (1 x below the top rail & 1 x just above the base) to connect the adjoining assemblies, with nuts on the inside of the worksite. Securely tighten the nuts using a ratchet or impact gun with a 16mm socket.
7. Repeat steps 2-6 until the required length of SmartWall is installed.
8. Check the drainage bungs are tightly secured & then fill each base with water to the required level. Once full, insert & tighten the filling point bung.

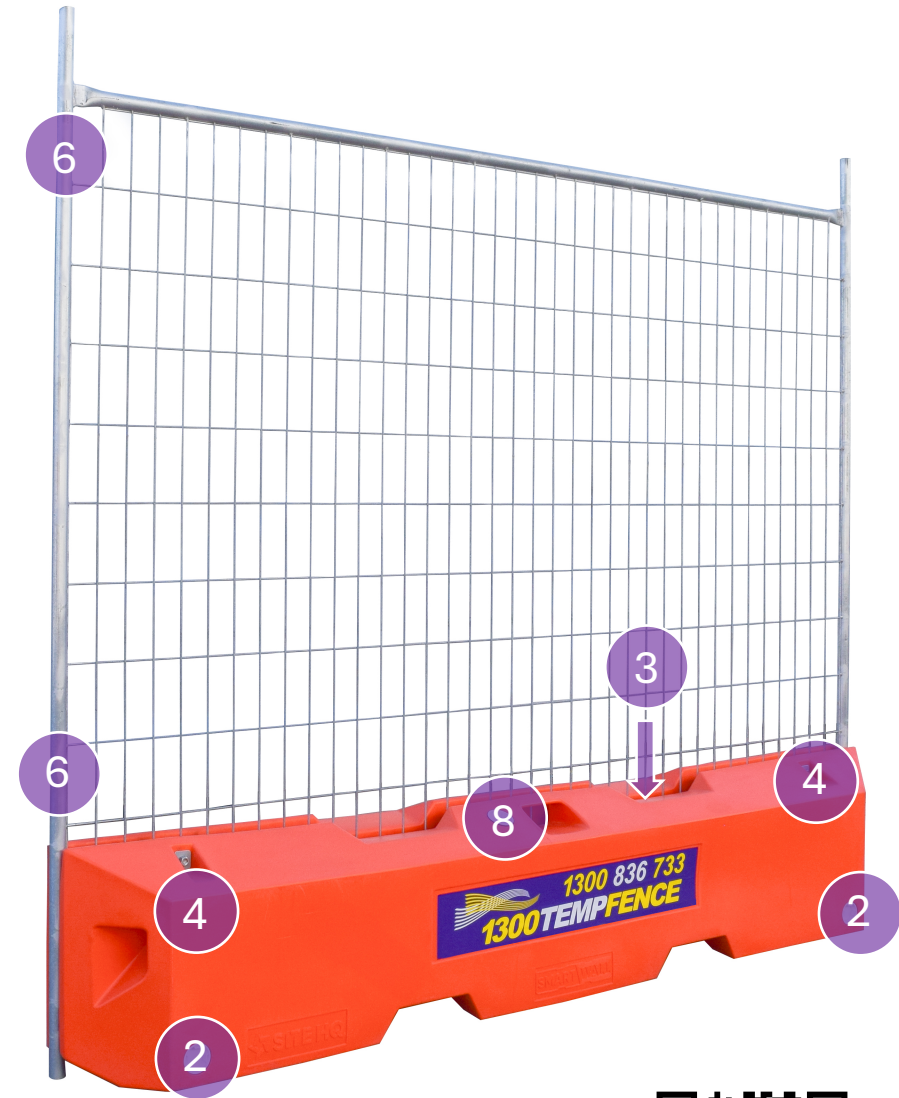

Check out our
installation video



SMART WALL

INSTALLATION INFORMATION



DISMANTLING


SMART WALL

TOOLS REQUIRED

- 16mm deep socket for fence panel clamps
- Bung tool for filling & drainage bungs
- Strapping equipment (strapping material, dispenser & tools, clips, etc)
- 2.4m fence panel stillage (for storage)

INSTRUCTIONS

1. Using the bung tool, loosen the filling point bung at the top of the base to assist with faster drainage.
2. Undo & remove the drainage bungs to empty water from the bases.
3. Remove the 2 x panel clamps with a 16mm socket to disconnect the panel assemblies.
4. Remove the 2 x M10 panel lock bolt sets with an 16mm socket to disconnect the panel from base.
5. Remove the fence panel from the receiving slot of the SmartWall base and stack onto stillages for storage.
6. When all water has drained, reinstall the filling and drainage bungs into the bases.
7. Pack the SmartWall bases into 9 x pack assemblies (3 x bases high by 3 x bases wide) and strap together ready for safe storage or transport.

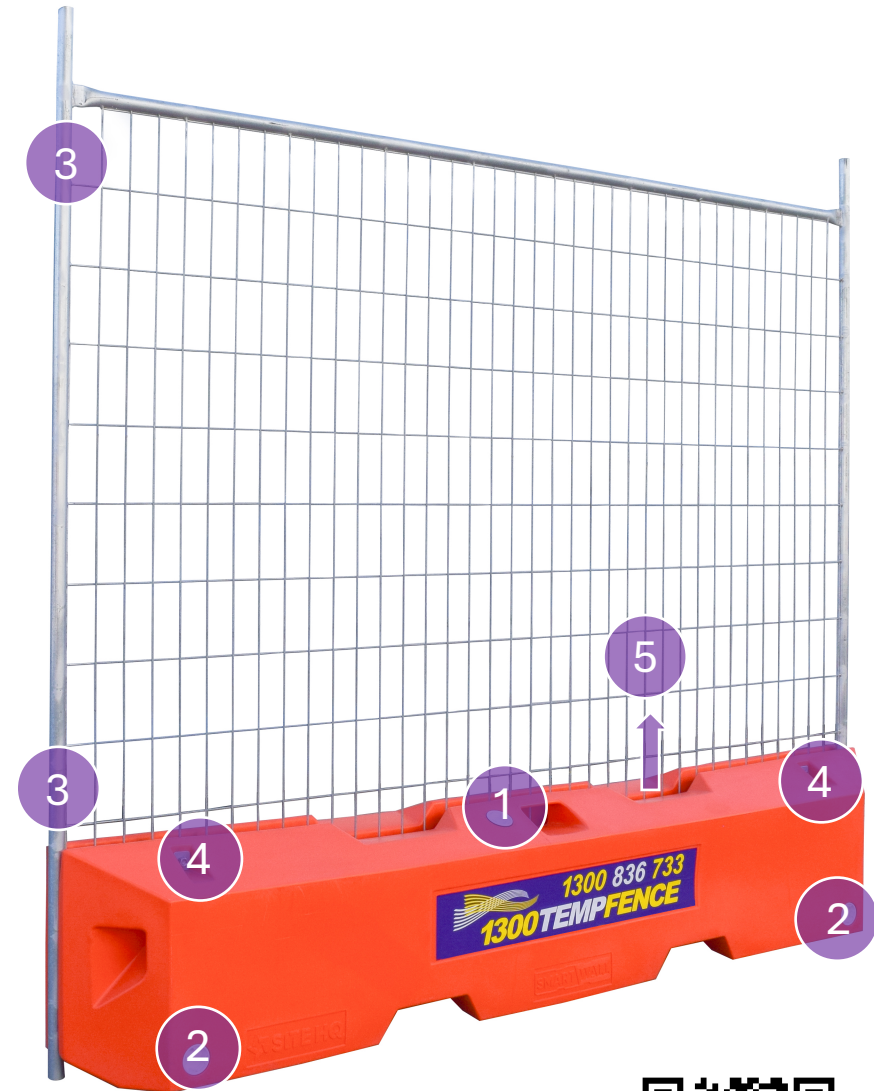

Check out our
installation video



SMART WALL

INSTALLATION INFORMATION

